

## HOTPOINT SERVICE OFFICES

If you have any trouble with your appliance, please call whichever of these numbers you think is applicable. It does not matter if you guess wrong: we'll make sure that the nearest Hotpoint Service Office tackles the problem.

### NORTH EAST

**N. Humbs, E. Yorks:**  
Custom House Building, Whiteragale, Hull  
Tel: Hull 224777  
**S. Yorks:**  
Morphy Richards, Mexborough, South Yorkshire  
Tel: Welthaby 61444/61761  
**N. & W. Yorks:**  
Sandbeck Lane, Welthaby, West Yorkshire  
Tel: Middlesbrough 248436  
**S. Durham, Cleveland:**  
59 Albert Road, Middlesbrough  
Tel: Newcastle 321008  
**N. Durham, Tyne & Wear, W. Humberside:**  
24 Northumberland Road, Newcastle upon Tyne

### NORTH WEST

**Cumbria, Lancashire:**  
Marrford House, 28 Highgate, Kendal, Cumbria  
Tel: Kendal 24483  
**Lancashire:**  
2425 Cannon Street Preston, Lancashire  
Tel: Preston 24311  
**Greater Manchester:**  
44/46 Station Road, Heaton Mersey, Stockport  
Tel: 061-442 8677  
**Merseyside:**  
40 Cowley Hill Lane, St. Helens, Merseyside  
Tel: St. Helens 35152  
**Cheshire, Wirral:**  
1 Church Parade, Ellesmere Port, South Wirral  
Tel: 051-356 2141

### S & W MIDLANDS

**Herefordshire:**  
303 Brington Hill, Brington, Bristol  
Tel: Bristol 714471  
**Berks, Bucks, Dorset:**  
224 Broadway, Wilcock, Oxon  
Tel: D. 300 817711  
**Staffs, Shropshire:**  
West Avenue, Wesson Estate, Telford, Shropshire  
Tel: Kidsgrove 74511  
**West Midlands:**  
Wesgate, Aldridge, W. Midlands  
Tel: Aldridge 55641/55861

### E. MIDLANDS

**Leics:**  
65 Belgrave Gate, Leicester  
Tel: Leicester 29336  
**N. Lincs, S. Humbers:**  
Firth Road, Lincoln  
Tel: Lincoln 33611  
**S. Lincs:**  
Celia Road, Fletton, Peterborough, Cambs  
Tel: Peterborough 64741  
**Northants, Warwick:**  
336 Cambridge Street, Wellingborough, Northants  
Tel: Wellingborough 228689  
**Norths, Derbys:**  
Ashing Street, Nottingham  
Tel: Nottingham 862431

### EASTERN

**Beds, N. Herts:**  
5 Cwaley Road, Luton, Beds  
Tel: Luton 452211  
**Northfolk, Suffolk:**  
92 Upper St Giles Street, Norwich  
Tel: Norwich 20581  
**Cambs, Humbs:**  
Celia Road, Fletton, Peterborough, Cambs  
Tel: Peterborough 64741  
**Essex:**  
Industrial Buildings, Beehive Lane, Chelmsford, Essex  
Tel: Chelmsford 269331

### LONDON & SOUTH EAST

**Middlesex, S. Herts:**  
68 East Lane, Wembley, Middlesex  
Tel: 01-908 1933  
**London:**  
68 East Lane, Wembley, Middlesex  
Tel: 01-904 1250  
**Surrey:**  
2 St. Nicholas Road, Sutton, Surrey  
Tel: 01-643 0921  
**Sussex:**  
1 Kingswood, North Street, Hailsham, Sussex  
Tel: Hailsham 942733  
**Kent:**  
Lanfield Trading Estate, New Hythe Lane, Lanfield, Kent  
Tel: Maidstone 76571

### SOUTH WEST

**Glouce, Avon, Wills, Somerset:**  
315 Brington Hill, Brington, Bristol  
Tel: Bristol 714471  
**Devon:**  
69 Mulley Place, Plymouth  
Tel: Plymouth 262631  
**Hamshire, Dorset:**  
South Hampshire Industrial Park, Salisbury Road, Totton, Hants  
Tel: Southampton 861981

### SCOTLAND

**Grampian, Highlands:**  
Hobbeck House, 68 Garden Place, Aberdeen  
Tel: Aberdeen 6422263  
**Fife, Perth:**  
Barnerman House, South Tay Street, Dundee  
Tel: Dundee 28383  
**Central, Lothians, Borders:**  
55 West Bowling Green Street, Leith, Edinburgh  
Tel: 031-554 1431  
**Strathclyde, Dumfries, Galloway:**  
West Lodge Road, Blythswood Estate, Hamilton  
Tel: 041-886 6241

### WALES

**North Wales:**  
Conwy Road, Llandudno Junction  
Tel: Deganwy 82826  
**Mid & S. Wales:**  
18 Western Avenue, Bridgend Industrial Estate, Bridgend, Mid-Glamorgan  
Tel: Bridgend 64121

### IRELAND

**Northern Ireland:**  
256 Ormeau Road, Belfast 7  
Tel: Belfast 647111  
**Essex:**  
35/36 Arran Quay, Dublin 7  
Tel: Dublin 759222

Sometimes a number is changed when an edition of this booklet is still current. So if you get no reply from one of these, either try another of the numbers shown here, or see under Hotpoint in your telephone book.

# Hotpoint

Hotpoint Ltd., Peterborough, England, PE2 9JB

366 559 1.85

# Hotpoint Handbook

for your Built-under Oven  
and Electric Hob

Models 6130, 6310 and 6350



# Hotpoint

# Your new appliance

Using your new oven or hob is easy. Nevertheless, to get the very best results it is important to get to know your new appliance by reading right through this handbook **before** using your oven or hob for the first time.

**For installation into your housing unit or worktop, please see the separate handbook and do make sure that any electrical wiring is carried out by a qualified electrician.**

The handbook covers the following models:

**Model 6130** — Built-Under Oven with controls for electric or ceramic hob.

**Model 6310** — Four Plate Electric Hob.

**Model 6350** — Four Plate Ceramic Hob.

# Five Year Guarantee

From the moment your Oven and Hob are delivered Hotpoint guarantee them for FIVE YEARS. During the five years all parts are completely free of charge provided they are fitted by Hotpoint's own Service Engineer. Labour costs are chargeable after the first year.

This guarantee does not cover accidents, negligence or power cuts. The Oven and Hob must be used in the United Kingdom and must not be tampered with or taken apart by anyone who is not an authorised Hotpoint representative. Hotpoint's guarantee in no way limits your legal rights.

Service is provided by Hotpoint's own service organisation. Should you have any problems simply telephone your nearest Service Office, the address for which is shown on the back of this handbook.

## **Proof of Purchase**

For future reference please attach your purchase receipt to this handbook and keep it in a safe place.

**In accordance with its policy of progressive product design, the company reserves the right to alter specifications.**

# Accessories and Spares

Orders for accessories and spares should be sent to one of the Hotpoint Service Centres shown below. You will be sent the part, plus an invoice.

For normal Service calls you should contact your nearest Hotpoint Service Office shown on the back of this Handbook.

Hotpoint Limited, West Lodge Road, Renfrew, Glasgow, PA4 9EN  
Tel: 041-886 5611

Hotpoint Limited, Sandbeck Lane, Wetherby, LS22 4TW  
Tel: 0937 61221

Hotpoint Limited, 44/46 Station Road, Heaton Mersey, Stockport, SK4 3QT  
Tel: 061-432 0255

Hotpoint Limited, Ashling Street, Nottingham, NG2 3JB  
Tel: 0602 860387

Hotpoint Limited, Westgate, Aldridge, W. Midlands, WS9 8UX  
Tel: 0922 55866

Hotpoint Limited, Spares Administration Dept., Celta Road, Peterborough, PE2 9JB  
Tel: 0733 68989

Hotpoint Limited, 18 Western Avenue, Bridgend Industrial Estate, Bridgend, Mid-Glamorgan, CF31 3SL  
Tel: 0656 64127

Hotpoint Limited, East Lane, Wembley, Middx, HA9 7PQ  
Tel: 01-904 0201

Hotpoint Limited, Larkfield Trading Estate, New Hyde Lane, Larkfield, Kent, ME20 6SW  
Tel: 0622 76631

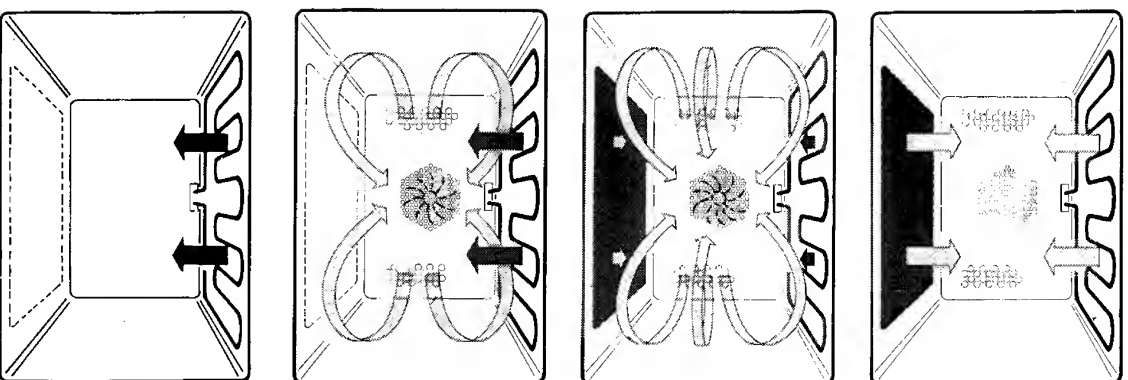 
Hotpoint Limited, Unit R, South Hampshire Industrial Park, Salisbury Road, Totton, Southampton, SO4 3SA  
Tel: 0703 867933


# Contents


	Page
<b>THE BUILT-UNDER OVEN</b> .....	4
The different heating systems .....	
<b>Get to know the main parts of your Built-Under Oven</b> .....	5
<b>Before using your oven for the first time</b> .....	6
<b>The controls</b> .....	7-9
The Automatic Oven Timer .....	
Minute Minder .....	
<b>Cooking in the Oven</b> .....	10-14
Baking and Roasting using conventional heat .....	
Fan Assisted Cooking – Baking, Defrosting .....	
Fan Assisted Grilling – Roasting .....	
Grilling .....	
Warning Dishes .....	
<b>Temperature Conversion Chart</b> .....	14
<b>THE HOB</b> .....	15-18
The Controls .....	
The Rear Hotplates on the Electric Hobs .....	
and all the Cooking Zones on the Ceramic Hob .....	
The Front Automatic Fast Heat Plates on the Electric Hobs .....	
Using the Correct Pan .....	
The Ceramic Hob – Dual Cooking Zones .....	
Cooking on the Ceramic Hob .....	
<b>CARING FOR YOUR OVEN AND HOB</b> .....	19-20
<b>The Oven</b> .....	19
Cleaning the Outside .....	
‘Stay Clean’ Liners .....	
Cleaning the Oven Door .....	
Cleaning the Interior .....	
How to replace the Oven Light .....	
<b>The Hobs</b> .....	20
Stainless Steel and Enamel Hobs .....	
Hotplates .....	
The Ceramic Hob .....	
<b>If your Oven and/or Hob won't work</b> .....	21
<b>Accessories and ordering them</b> .....	22
<b>Five Year Guarantee</b> .....	23
<b>Hotpoint Service Offices</b> .....	24


# The Built-Under Oven


Your new oven is equipped with four different heating systems:



 1. **Conventional Heating**  – with upper and lower heat. This system is particularly suitable for roasting and baking on one shelf only.

2. **Fan Assisted**  – the fan oven operates by constantly moving heated air around the oven. This gives improved efficiency and, in general, enables the use of lower temperatures for cooking. It also means that there is less need to be particular about shelf positions and that you can bake at more than one level simultaneously.

3. **Fan Assisted Grilling**  – this is a combination of heat from the grill element and hot air circulated by the fan. Joints of meat and poultry will be browned as if they were cooked on a rotisserie or spit but more economically as the door is left closed.







4. **Variable Grilling**  – the oven can also be used for conventional grilling with a full width, fully controllable grill.

These four systems of cooking are described more fully in the separate Recipe Book and we would suggest you read right through the Introductory Section of that book **before** using the oven.

# If your Oven or Hob won't work

  ... **don't panic.**

Just quickly check these points before calling a Hotpoint engineer.

1. Check that the mains supply has been switched on.
2. If the Electronic Clock Display is flashing , , the power supply has been interrupted: to reset the clock see page 6.
3. Check that the Time Control has been set to  (Manual) operation and not left on automatic (see page 6).
4. Have you turned both the Function Selector  and the Oven Thermostat  to the appropriate positions?
5. If grilling have you turned the Oven Thermostat to  and the Variable Grill Control to the required setting?
6. The Electric or Ceramic Hobs — If the hotplates or cooking zones are not giving the amount of heat you require check that you are using the correct setting (see page 15, 16).
7. The Ceramic Hob — If food takes a long time to cook check that the base of the pans you are using are completely flat.

If, after following these instructions, your oven or hob still won't work properly, call your nearest Hotpoint Service Office. The telephone number is shown on the back page of this handbook.

When you contact us we need to know:

1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model number (Oven 6130 and Hob 6310 or 6350).
5. When it was purchased.

Put the date here .....

Make sure you have all these details before you call. Meanwhile, switch off the appliance at the mains supply and leave it alone until the Engineer calls.

However, if higher cooking temperatures are not regularly used then it may be necessary, in order to prevent heavy soiling, to run the oven from time to time at a higher setting of 250°C for a couple of hours.

### **Cleaning the floor and roof (if not fitted with optional 'Stay Clean' liners) of the oven, meat pan and shelves**

Use a fine steel wool soap pad to remove stubborn stains from the wire shelves, meat pan, floor, sides and roof of the oven. Rinse and dry with a soft cloth.

**Note:** Abrasive cleaners or an oven spray or pad should not be allowed to come into contact with the oven surround or trims.

### **How to replace the oven light**

Should the oven light fail to work, **switch off** the mains supply to the oven. Access to the bulb can be gained after first removing the lamp cover by turning anti-clockwise. The bulb can then be unscrewed and replaced by one of a similar type (Part No. 613002) which can be obtained from your nearest Hotpoint Service Centre (see page 22).

## **THE HOBS**

### **Stainless Steel and Enamel Hobs**

Wipe these over with a damp soapy cloth followed by rinsing and drying with a soft cloth but remember that some permanent discoloration may occur due to the high temperatures. Stubborn stains can be removed by using a liquid cleaner, e.g. Jif, and, on the stainless steel model, occasionally the use of a proprietary stainless steel cleaner will help to reduce discoloration. Do not use scouring pads or abrasive powder as these will scratch the surface.

### **Electric Hotplates**

Any spillage should be removed as soon as possible to prevent burning on. Use a damp soapy cloth to wipe the hotplates. Anything burnt on should be removed using a nylon scouring pad, e.g. Scotchbrite, steel wool or a proprietary solid hotplate cleaner. Rub a spot of oil onto the plates occasionally to maintain them. Do not use any cleaner which contains bleach.

### **The Ceramic Hob**

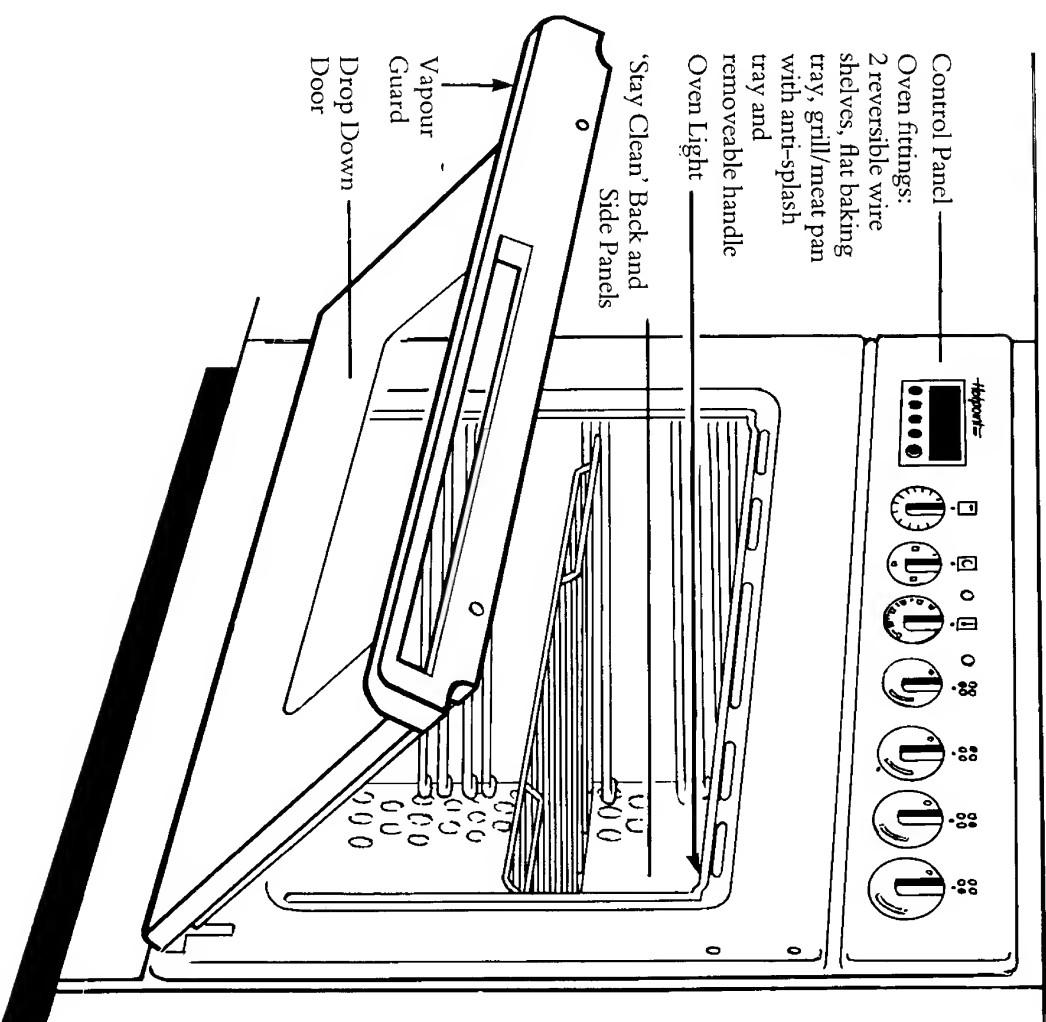 
Wipe up spills and splashes immediately, so that they do not become burnt on. This is particularly important in the case of sugar solutions as damage can occur to the hob surface. For daily cleaning use a liquid cleaner, e.g. Jif. Do not use any abrasive cleaner which could scratch the surface. Never put cooking oil or plastic items onto the hot cooking surface. Should these substances accidentally be burnt onto the hobs it is essential to remove them immediately to avoid damage.

To build up protection and keep the surface looking like new we recommend the weekly use of a Ceramic Hob Cleaner-Conditioner. This is available from any Hotpoint Service Centre (see page 22) under Part No. 630001. Regular use of a Cleaner-Conditioner will make future cleaning easier.

If heavy solids are burned onto the surface (e.g. boiled over milk) these can be removed, when the surface is cool enough, by careful use of a stainless steel razor or similar blade in a holder, followed by cleaning with a Conditioner.


After cleaning with Conditioner wipe the hob with a clean paper towel. This removes any film or specks of cleaner left on the surface, which would show up as dark specks or 'stains' next time the surface is heated.

# Get to know the main parts of your Oven



# Before using your Oven for the first time

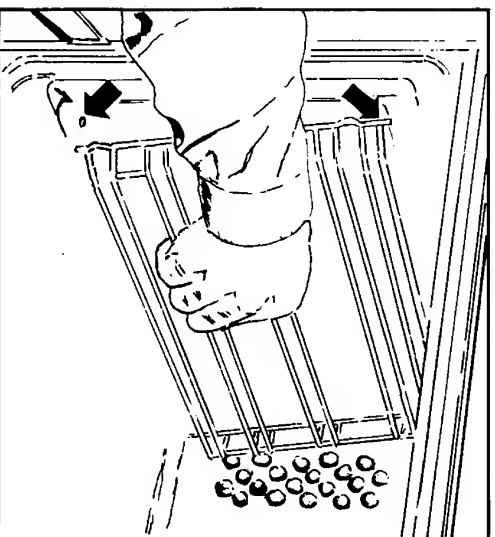 In some models the shelf racks will have to be inserted. To do this first push the long ends of the racks into the top openings in the liners and then insert the bottom ends in the holes provided.



## Make sure the electricity supply is switched ON.

Your Built-Under Oven is fitted with an Electronic Clock and Timer. When switching the oven on for the first time or if the power supply has been interrupted the Electronic Clock Display will flash **EE.EE**. To set the clock to the time of day press both the Minute Minder **Ⓢ** and Duration **→** Buttons and hold them in while turning the Time Control **↔** until the time of day appears in the Display. When you have reached the right time release the buttons and the clock will operate. Remember that the clock is a twenty-four hour one so that 3 o'clock in the afternoon will show in the display as **15.EE**.

## Manual/Automatic

For normal operation (without automatic timing) the Manual/Automatic Switch must be turned to **Ⓜ** (Manual).

To remove the 'new smell', heat up the empty oven for 30 minutes keeping the door closed. To do this turn the Oven Function Selector to **Ⓜ** – the Mains ON/OFF light on the Control Panel and the light inside the oven will come on – and set the Oven Thermostat to 250. When you do this the Oven Thermostat Light on the Control Panel will come on.

# Caring for your Oven and Hob

Before doing any cleaning always check that the electricity supply to the appliance is turned OFF.

## THE OVEN

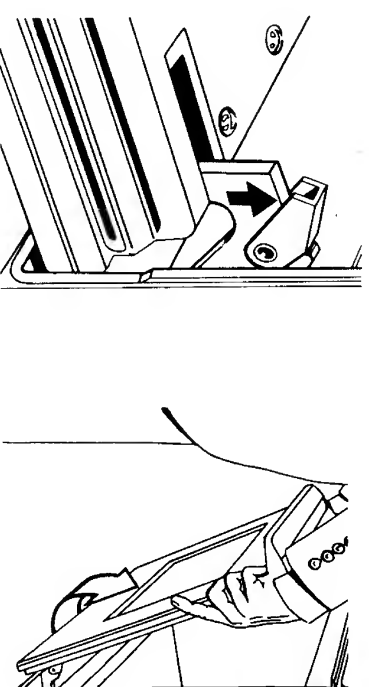 
### Cleaning the Outside

Clean the outside by wiping down with a damp cloth using a small amount of detergent, followed by wiping down with a dry clean cloth. Never use an abrasive powder as this will damage the surface.

### Cleaning the Oven Door

The door can be removed for cleaning. To do this, open the door and swing the hinge step upwards (see A). Close the door as far as the 'stop' position. Lifting the door slightly, pull it, complete with hinges, away from the oven housing (see B).

Subborn stains on the inside of the door can be removed by using a liquid cleaner, e.g. Jif. During cleaning the door must not be immersed in water. Do not use scouring pads or abrasive powder which will scratch the glass. Cleaners which contain bleach should also not be used as they may dull the surface. After cleaning, rinse and dry with a soft cloth.



## 'Stay Clean' Liners

The back and sides of the oven are fitted with 'Stay Clean' Liners which absorb cooking soils.

'Stay Clean' roof panels are available as optional extras (Part No. 613165). These are available from any Hotpoint Service Centre (see page 22).

At high temperatures the special surface enables these soils to be slowly destroyed. The higher the temperature the more effective this will be. In most cases this cleaning operation will take place during cooking.

# The Hobs (cont'd)

## Dual Cooking Zones

Two of the cooking zones are fitted with dual circuits so that a wide variety of different size saucepans can be used.

When you turn the rear left hand hob control on, the round area of the cooking zone will heat up. If you turn the left hand switch at the back of the hob to 'on', the indicator light will come on, and the whole of the extended cooking zone will heat up, ideal for the larger size pan or frying pan.

When you turn the front right hob control on, the inner part of the cooking zone will heat up ideal for small milk pans. If you turn the right hand switch at the back of the hob to 'on', the indicator light will come on and the whole of the large cooking zone will heat up.

## Cooking on the Ceramic Hob

When placing a pan on the ceramic surface make sure that the base is clean, free from grit, and dry.

A pan may be moved away from the cooking zone to reduce the heat quickly and be left only partly over the cooking zone provided that the control is turned down from the maximum setting.

**Never** leave a cooking zone on for long periods when not covered by a pan. Spillage should be dealt with as soon as it occurs. Any spillage left on the surface after cooking should be cleaned off (see page 20) before the hob is switched on again to prevent baking on.

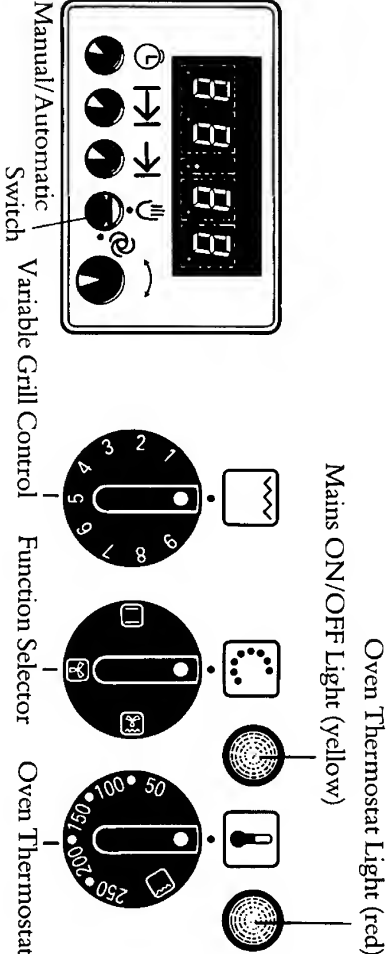 
**Do not** cook directly on the hob itself and under no circumstances should the hob be used with aluminium foil in contact with the hob surface. Whilst the hob may be used as an additional work surface care must be taken to ensure that it is not scratched (e.g. do not use the hob as a chopping board).

**Do not** put plastic items on a warm cooking zone.

## IMPORTANT — DO NOT USE THE HOB IF IT IS CRACKED – SWITCH

**OFF AT THE MAINS IMMEDIATELY** and contact your nearest Hotpoint Service Office, for telephone number see back of handbook.

# The controls


 





## Mains ON/OFF Light (Yellow)

This light will come on and stay on as soon as the Function Selector is turned on.

Before using the Oven the Function Selector  must be turned to the appropriate position. The control has three settings:

 -  Conventional
-  Fan-assisted
-  Fan-assisted grilling

Now turn the Oven Thermostat  clockwise to the required temperature. The thermostat light will immediately come on when either Conventional  or Fan-assisted  is selected and will remain on until the oven reaches the required temperature. The light will then automatically go on and off during cooking as the oven thermostat maintains the temperature. If the thermostat light does not come on when the thermostat is turned on, make sure that the Manual/Automatic Switch is turned to  (Manual). When Fan-assisted grilling  is selected the thermostat light will not operate.

 

 
To use the grill set the Thermostat Control to  and the Variable Grill Control within the range 1-9 and remember to keep the oven door closed.

After use, always set the controls back to '●' (Off).


**Note:** The Oven Thermostat must be turned anti-clockwise to switch off.

## The Automatic Oven Timer

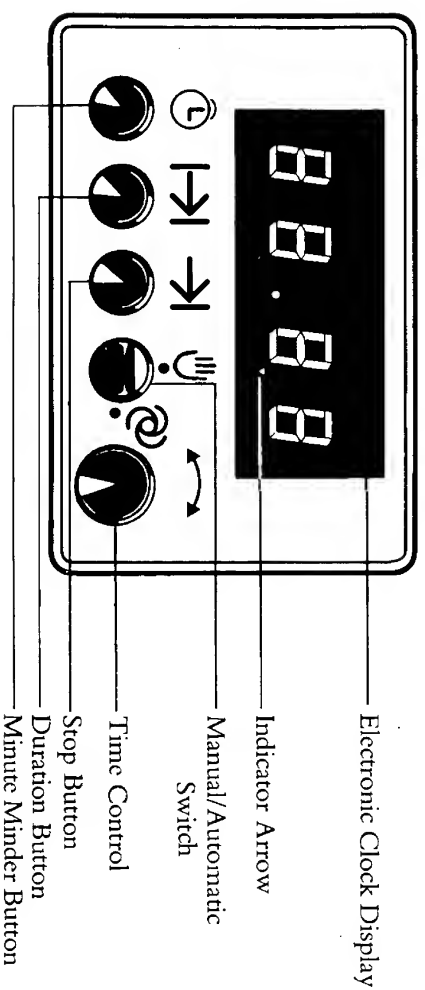 The Oven can be controlled by the Automatic Timer.

The Timer is controlled by the Electronic Clock. Check that the clock is showing the correct time, if not reset it by pressing in both the Minute Minder  and Duration  Buttons and hold them in while turning the Time Control  until the correct time appears in the Display.

## THE AUTOMATIC OVEN TIMER



### The Minute Minder

The Minute Minder can be used independently or in conjunction with the automatic timer and will give an audible reminder. It does not control the operation of the ovens.

Press the Minute Minder Button ① and ② will appear in the Display.

Holding the button in turn the Time Control ③ to the length of time required.

Release the button and the Display will revert back to the time of day but with the arrow still showing above the Minute Minder Button. The Minute Minder Button can

be pressed at any time to show how long it will be before it sounds. At the end of the set time the Minute Minder will sound for approximately 2 minutes but can be switched off

beforehand by pressing any one of the buttons.

**To set the timer to switch the Oven ON and OFF automatically**

1. Turn the timer to switch the Oven ON and OFF automatically

immediately above will start to flash.

2. Press the Stop Button ④. An indicator arrow will appear above the button and the

Display will show ⑤. Holding the Stop Button in turn the Time Control

⑥ until the time you want the meal to finish cooking appears in the Display.

Release the button and the clock will revert back to the time of day but with the two

indicator arrows still showing.

3. Press the Duration Button ⑦. An indicator arrow will appear above the button

the Display will show ⑧. Holding the Duration Button in turn the Time

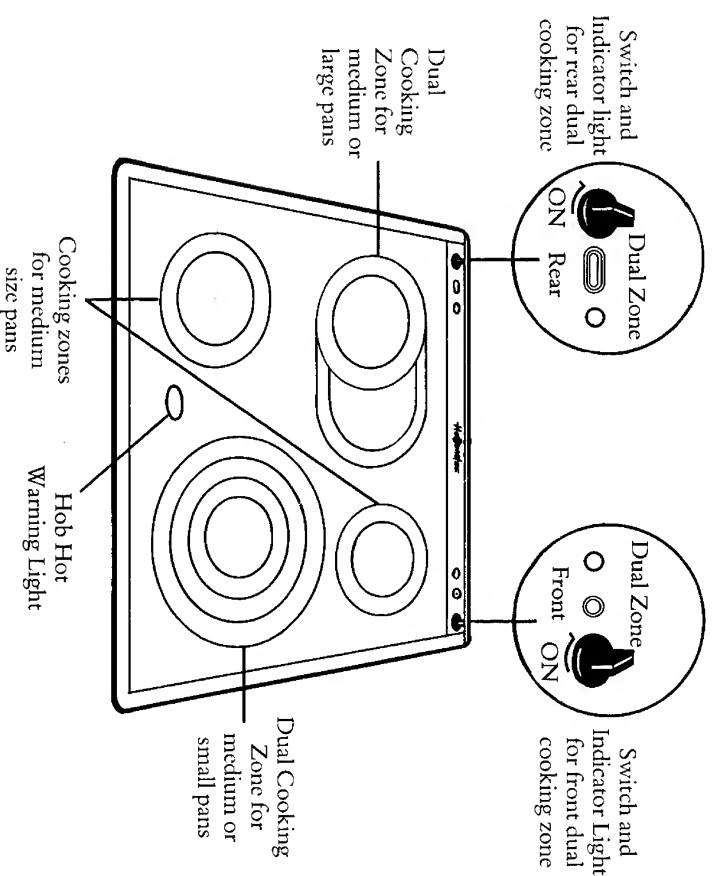 
Control ⑨ until the length of time you want the meal to cook for is shown in the

Display. (This sets the switching-on time.) Release the buttons and the clock will

revert back to the time of day with the three indicator arrows still showing.

4. Turn the Oven Thermostat to the required temperature and the Function Selector to the type of heating required (see Page 7).

## The Ceramic Hob Model 6350



The cooking surface is a heat resisting, extra tough glass-ceramic with a smooth surface which is unaffected by intense heat or rapid cooling. The areas not heated remain relatively cool.

The glass ceramic surface has four cooking zones. Soon after you turn one of the controls the Hob Hot Warning Light comes on and will stay on as long as any of the cooking zones are above 40°C, thus indicating that one or more of the zones are hot.



# The Hobs (cont'd)

## The Front Automatic Fast Heat Plates on the Electric Hobs

Turn the control to the required setting, the hotplate will quickly heat up the saucepan and its contents before cutting back to the required level of heat. There is no need to first select a high setting and then turn the power down, this will reduce the necessity for having to watch the pan and help prevent boiling over.

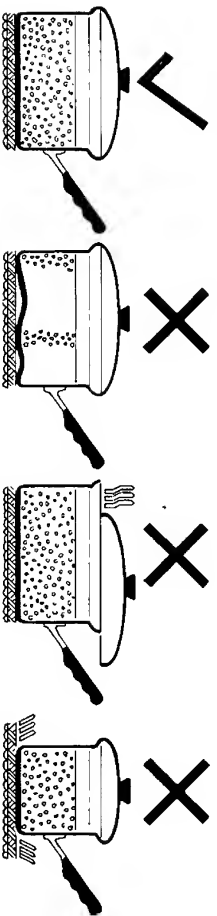 
Suggested settings are as follows:

- 1 – 3 Simmering
- 2 – 3 Cooking of small quantities
- 4 – 7 Cooking/Boiling
- 5 – 9 Frying.

Higher settings than the above may be necessary if:

- there is a large amount of food to be cooked
- you are cooking in an open pan
- you are cooking in a pan with an uneven base (not recommended)
- you are cooking in a pan larger than the hotplate.

## Using the correct pan




Saucepans should preferably be heavyweight (suitable for electricity) and should be completely flat (machined base).

An uneven pan base will result in longer cooking times and cost you more in electricity. Pans with a damaged or rough base should not be used on ceramic hobs as they could scratch the glass surface. Pans with a recessed or ridged base should not be used. Do not use an asbestos mat or anything else under the pan.

 
Cooking with the saucepan lid on will also save you time and electricity.

Always select a pan which is the same size as the hotplate or cooking zones – small pans, ideally, should not be used on the large hot plates or cooking zones.

 
 

Salt or water on the underside of the pan could damage the plates so always keep them dry and clean.

5. The oven will automatically switch ON (the indicator arrow will disappear) when the pre-selected start time has been reached and switch OFF when the Stop time is reached. At that time the arrow above the Stop button will disappear and the Minute Minder will start to sound to remind you that the meal is ready to take out. The Minute Minder will sound for approximately 2 minutes but can be switched off beforehand by pressing any one of the buttons.
6. After use turn the appropriate controls to 'O' (Off) and turn the Manual/Automatic switch to  (Manual). The arrow above the switch will cease to flash.

 

 
 
## To set the Timer to switch the Oven OFF only

1. The timer may be used to switch the oven off.
2. Follow Steps 1 and 2 as above.
3. Turn the Oven Thermostat to the required temperature and the Function Selector to the type of heating required (see Page 7). The Oven Thermostat light will come on and the oven start to heat up.
4. The oven will automatically switch OFF when the stop time is reached. At that time the arrow above the Stop Button will disappear and the Minute Minder will start to sound to remind you that the meal is ready to take out. The Minute Minder will sound for approximately 2 minutes but can be switched off beforehand by pressing any one of the buttons.
5. After use turn the appropriate controls to 'O' (Off) and turn the Manual/Automatic Switch to  (Manual). The arrow above the switch will cease to flash.

## To cancel the Timer and return to MANUAL operation

If you wish to use the oven manually after a timed operation has been set press the Stop Button  and holding it in turn the Time Control back to . Release the button and the clock will revert back to the time of day. Turn the Manual/Automatic Switch back to  (Manual). The arrow above the switch will cease to flash.

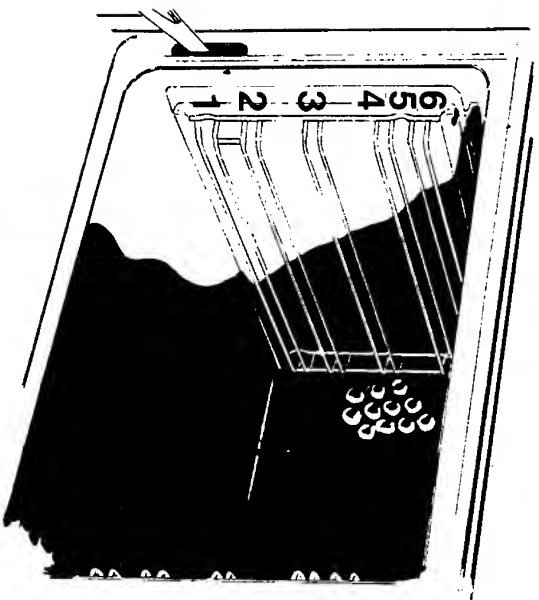 
## General notes on using the Automatic Timer

1. When setting any part of the timer always keep the appropriate button pressed in with one hand and turn the Time Control at the same time with the other hand.
2. After a button has been released an arrow will remain above it in the Display to act as a reminder of what has been selected.
3. If the arrow above the Manual/Automatic switch flashes, this indicates that one of the buttons needs to be set.
4. If you wish to cancel or change one of the settings simply press the appropriate button and turn the Time Control back to . Reset the appropriate button as required.
5. If after setting the timer or when the meal has started to cook you want to know how long it will take simply press the Duration Button  and the length of time will be shown in the Display.
6. If you want to know when the cooking will come to an end simply press the Stop Button  and the finishing time will be shown in the Display.
7. The Minute Minder can be set to come on before the end of automatic cooking, e.g. to remind you to put the vegetables on. The Minute Minder will sound a second time at the end of the automatic cooking period.
8. Always remember to switch the Manual/Automatic Switch back to  (Manual) after you have used the Automatic Timer.

# Cooking in the Oven

The temperatures given in the baking and roasting charts on the following pages are intended as a guide. You may find that you need to vary these to suit your personal taste.

**IMPORTANT** – Whichever method of cooking you are using you should **never** cook directly on the floor of the oven. If using aluminium foil, **never** allow it to touch the sides of the oven. **Never** cover the oven interior or shelves with foil.



Always use the door handle to open the oven and **not the vapour guard** as this becomes very hot during cooking and will remain so for some time after the cooking has ended.

To obtain the best results it is recommended that you use the baking tray and meat pan provided either on their own if you are cooking on one shelf only or if cooking on more than one shelf in conjunction with your own baking tins.

Only put in the shelves or fittings you actually want to use. Unused shelves only restrict access and get in the way. If possible it is a good idea to remove the fittings when you have finished cooking so that when you next come to use the oven you do not inadvertently heat up unnecessary shelves or tins – as well as being more convenient this will even save electricity.

## Baking and Roasting using Conventional Heating

Turn the Function Selector  to  and the Main Oven Thermostat  to the required temperature.

# The Hobs

## Ceramic Hob Model 6350 and Electric Hob Model 6310

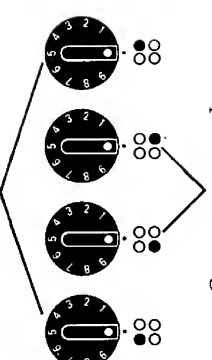 
### The Controls

The Ceramic and Electric Hobs are operated by the controls on the control panel of the Built Under Oven (model 6130)

The relevant control for each ring is clearly indicated on the control panel and has nine settings. Simply turn the control to the setting required and the hob ON/OFF light will come on. When switching off turn the control to the 'O' (Off) position.

Controls for rear hotplates or cooking zones.

Hob ON/OFF light (green).



Controls for Front Hot Plates or Cooking Zones.

### The Rear Hotplates on the Electric Hobs and all the Cooking Zones on the Ceramic Hob

To bring items to the boil turn the control to setting 9 initially and then turn down to a lower setting as required. Similarly when frying turn to setting 9 until the fat is hot and then lower the setting according to your requirements.

**Note:** Never leave hot fat or cooking oil unattended.

Suggested settings are as follows:

- 1 – 3 Simmering
- 2 – 3 Cooking of small quantities
- 4 – 7 Cooking/Boiling
- 5 – 9 Frying.

# Cooking in the Oven

(cont'd)

## Warming Dishes

The oven can be used just to warm dishes or for keeping food hot. Dishes should not be placed directly on the floor of the oven and the Oven Thermostat should not be set above 75°C.

Take care, particularly with delicate crockery.

## Temperature Conversion Chart

The Oven Thermostat is marked in degrees Centigrade. This chart will help when recipes show the alternative Fahrenheit scale or such terms as 'Slow Oven', 'Moderate Oven' and 'Hot Oven' are used.

Oven Temperature Guide	Centigrade Scale	Fahrenheit Scale
Cool	70°C 80°C 100°C 110°C	150°F 175°F 200°F 225°F
Slow	120°C 140°C 150°C	250°F 275°F 300°F
Moderate	160°C 180°C	325°F 350°F
Fairly Hot	190°C 200°C	375°F 400°F
Hot	220°C 230°C	425°F 450°F
Very Hot	240°C 250°C 260°C	475°F 500°F 525°F

## Baking

Always put the item you are baking in the centre of the shelf. You will find that shelf position 1 or 2 will give the best results. If you are baking on more than one shelf or cooking cakes in tinware, then the fan assisted system is recommended.

## Baking Chart

Food	Temperature °C	Shelf Position
Bread	200-220	1-2
Scones	200-220	1-2
Soufflé	190-210	1-2
Apple tart	180-200	1-2
Swiss roll	180-190	1-2
Victoria sandwich	170-180	1-2
Rich fruit cake	130-140	1
Meringues	75	1-2

## Roasting

If roasting in an open dish, shelf position 2 is recommended.

If roasting directly in the meat pan use the anti-splash tray supplied so that, during cooking, all the fat drains into the cavity base, this ensures that oven cleaning is kept to a minimum.

If roasting or casserole cooking in a closed dish, it should be placed on one of the shelves either at position 1 or 2 depending on the size of the dish.





## Roasting Chart

Food	Temperature °C	Shelf Position
Poultry	200	2
Beef	180-190	2
Game	180-200	2
Lamb	170-190	2
Baked fish	170-190	2
Veal, Pork	170-180	2
Casserole	150-180	1-2

# Cooking in the Oven

(cont'd)

## Baking and defrosting food using fan assisted heat

Turn the Function Selector  to  and the Oven Thermostat to the required temperature.

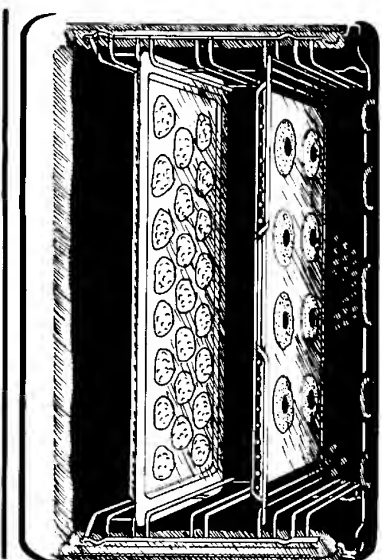 
### Baking

The advantage of this method of cooking is that as the oven heats up more quickly and generally foods cook at a lower temperature than in a conventional oven, pre-heating the oven is only required if the cooking time is less than 25 minutes.

Since the distribution of heat is more even most foods will cook satisfactorily in any shelf position, but the shelves should be evenly spaced. If only one shelf is being used then position 1 is preferable. Temperatures selected should be 10-40°C lower than with conventional heating – see separate cookery book.

When cooking a complete meal – for instance roast beef, roast potatoes, Yorkshire pudding and apple pie, place meat/potatoes on anti-splash tray in meat pan in position 2 with apple pie and Yorkshire pudding in position 3.

When all three shelves are used to cook large quantities of food for home freezing or parties, it may be necessary to increase the cooking times by a few minutes to allow for the larger mass of food and take out food on the upper shelf slightly earlier. If you are batch cooking you will need to pre-heat the oven. Use the baking tray supplied with the oven in position 1 and your own baking tins at position 3 if baking on two shelves. If batch baking on three shelves use positions 1, 3 and 4.




### Defrosting

**Without Heat** – for frozen foods such as cakes, fruit, etc. the Oven Thermostat should be set at 'O' (Off) and shelf position 2 used.

**With Heat** – for chicken portions, sausages, meat rolls, etc. turn the Oven Thermostat to 50-75°C and again use shelf position 2. This method of defrosting is only recommended for food up to 2kg in weight and the food should be cooked immediately afterwards.

## Fan Assisted Grilling – Roasting

 In this method of cooking the top heating element and the hot air fan are switched on and off alternately. It is ideal for roasting a joint or chicken and has the same results as if you were cooking on a rotisserie but more economically as the door is left closed.


There is no need to pre-heat the oven. Insert the meat tin and anti-splash tray at shelf position 1. Put the food on one of the wire shelves at shelf position 2 or 3 depending on the height of the food. Turn the Function Selector to  and the Oven Thermostat to the required temperature. For large pieces of meat or several pieces a lower temperature and a longer grilling time will be necessary.



### Roasting Chart

Food	Temperature °C
Poultry	180-200
Duck	(turn over approx. half way through cooking period)
Lamb	200
Pork	160-180
	150-180

### Grilling

The oven can be used as an ordinary grill for such items as sausages, flat pieces of meat and fish. Turn the Oven Thermostat to  and the Variable Grill Control to the required setting 1-9.

Grilling should always be done with the oven door **CLOSED**. There is no need to pre-heat. Use the grill pan with the anti-splash tray and the reversible grill pan grid if necessary in position 2-4 according to the thickness of the food. If you find excessive smoke being emitted, turn the Variable Grill Control to a lower setting and/or move the shelf with the food on to a lower position.



## **Key Contacts**

### **After Sales Service**

Over 1100 trained specialists, directly employed by us, ensure that you have complete confidence in both the appliances and services we offer.

#### **Repair Service**

UK: 08709 066 066

(Open 8 to 8 Mon - Fri, 8 to 6 Sat & 10 to 4 Sun)

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: 1850 302 200

Note: Our Service Operators will require the following information:

Model Number

Serial Number

#### **Extended Warranties**

UK: 08709 088 088

(Open 8 to 6 Mon - Fri)

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: 1850 502 200

#### **Genuine Parts and Accessories**

UK: 08709 077 077

(Open 8-30 to 5-30 Mon - Fri, 8-30 to 12 Sat)

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: (01) 842 6836

General Domestic Appliances Limited, Morley Way, Peterborough, PE2 9JB